


ROD FLOOR ASSEMBLY INSTRUCTIONS

****WARNING – THE ROD FLOOR MAY CAUSE CATASTROPHIC INJURY INCLUDING PARALYSIS AND DEATH. DO NOT USE WITHOUT PROPER TRAINING AND PROPER SUPERVISION****

****USE GLOVES WHEN HANDLING THE FIBERGLASS RODS****

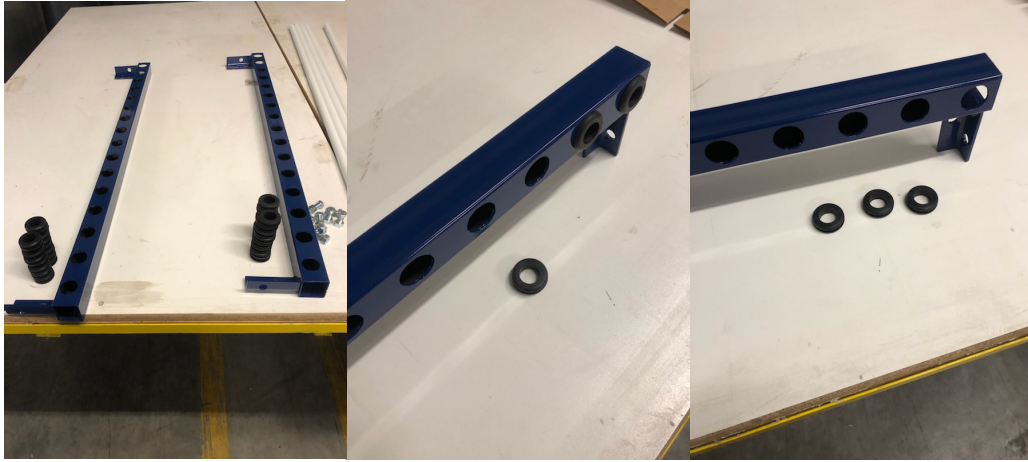

Start by adding the grommets into the holes on the sides of the frames. A small flat head screwdriver will help with the installation of the grommets.



Lay the one metal frame piece that has holes in it, on the ground or table, with the metal end pieces sticking up. Insert the fiberglass rods into each hole. There should be 16 rods. Install the other side in the same manner. The metal frame piece should stay in place until the next step.



Take the other metal piece (no holes) and install it by sliding the end piece down over the other metal piece. Secure the two metal pieces together with the nut and bolt provided. There should be eight nuts and bolts pr section. Do this to both sides.

Once all bolts are securely tightened, the rod floor is complete and can be turned over.